




ESBE AB
Bruksgatan 22
SE-333 75 Reftele
www.esbe.eu

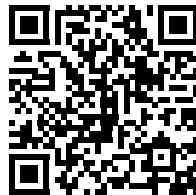


ESBE System Units
CIRCULATION UNIT DN25, DN32





Mtrl.nr. 98141083 • Rtn.nr. 7879 vers. C • Rev. 2023-06-12



Cabling • Dimensions

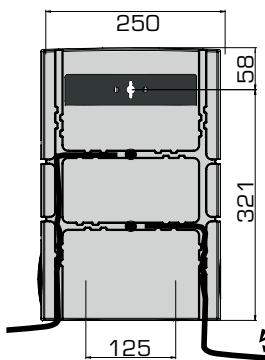

Mounting position

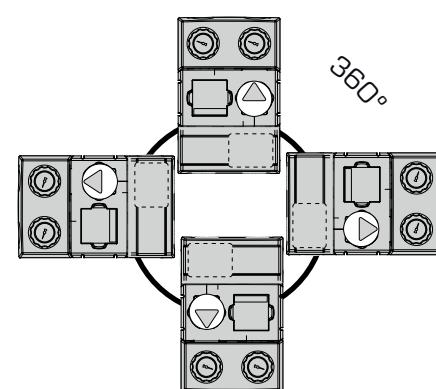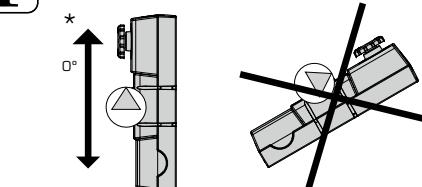

Series GDA200
Series GFA200
Series GRA200

CE LVD 2014/35/EU
EMC 2014/30/EU
RoHS 2015/863/EU
ErP 2009/125/EU
RED 2014/53/EU


PED 2014/68/EU, article 4.3

UKCA SI 2016 No. 1101
SI 2016 No. 1091
SI 2017 No. 3032
SI 2010 No. 2617
SI 2017 no. 1206



Series GRC200
Series GBA200


SI 2016 No. 1105

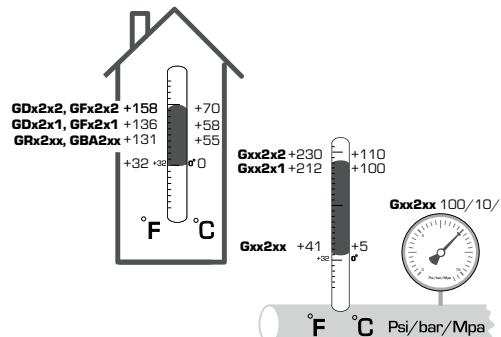


SERIES

FUNCTION


ESBE
GDA211
GDA 212

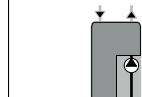


ESBE
GFA211
GFA212

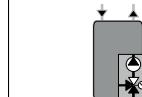


GRA211
GRA212
GRA231
GRA232

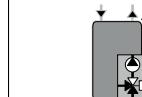

GRC221
GRC222
GRC241
GRC242


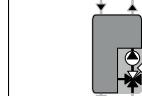


ESBE
GBA211

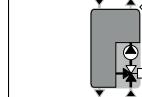

Remove actuator


Series GRA2xx, GBA211, GRC2xx

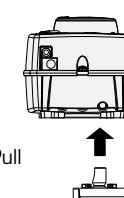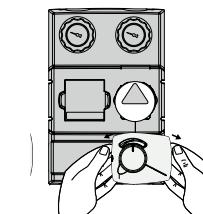


Pull




Fit supply pipes

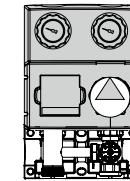


Disassembly insulation






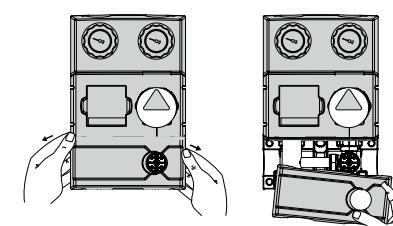


Assemble on manifold

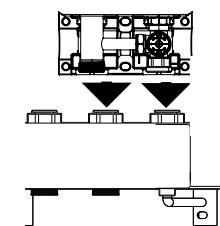


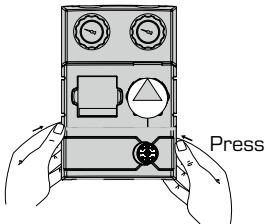3**Assemble lower insulation****Assemble actuator**



Series GRA2xx, GBA211, GRC2xx

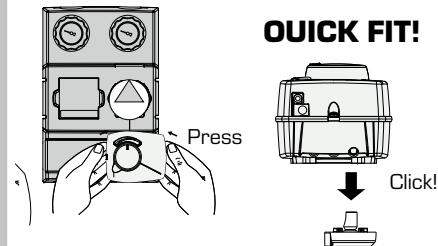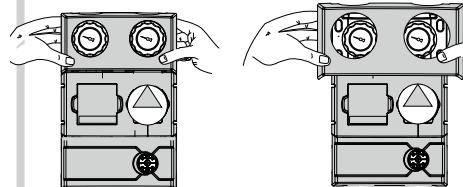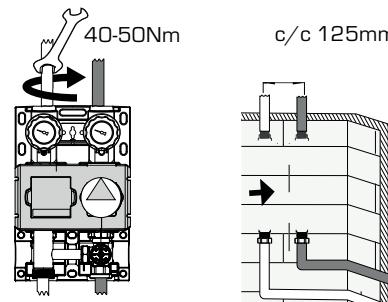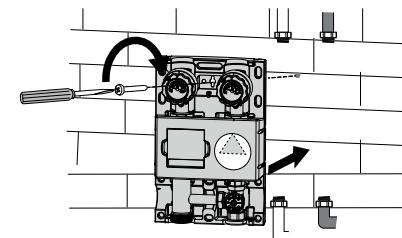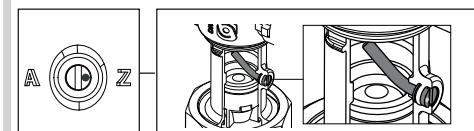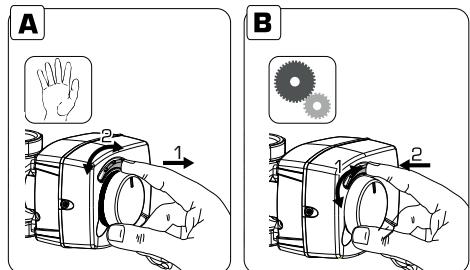**4****Pull up insulation****5****Assembling on wall without manifold****i****Commissioning****1****2****1****Filling and venting****i****Commissioning actuator:****i****Commissioning fixed temperature**


Series GFA211, GFA212

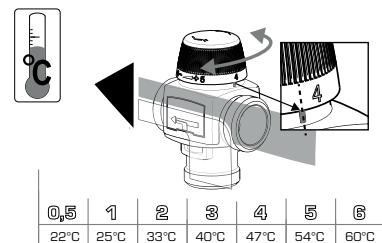

[https://esbe.eu/group/
products/rotary-actuators](https://esbe.eu/group/products/rotary-actuators)

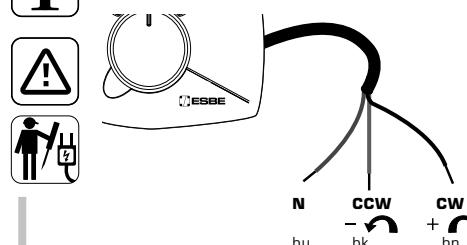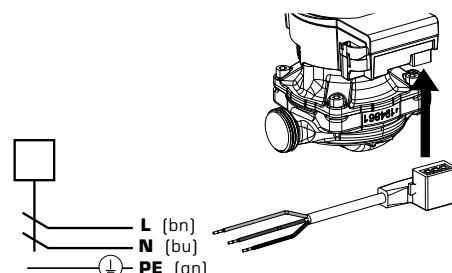
**i****Electric installation****Power**

i www.esbe.eu

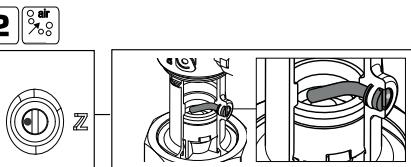2



Wilo Display

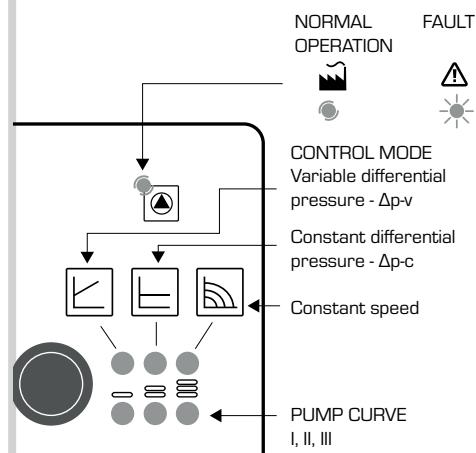

Pump Settings

Hold	LED display	Status
Hold 8 sec		Locked
Hold 8 sec		Unlocked
Hold 8 sec		Venting
Hold 8 sec		Manual restart
1. Hold 2. + 3. 4.		Factory setting




Settings navigations

		Control mode	
		Recommended	
		Alternative	
		Constant speed	
		Constant speed	
		Variable differential pressure Δp_v	
		Variable differential pressure Δp_v	
		Variable differential pressure Δp_v	
		Constant differential pressure Δp_v	
		Constant differential pressure Δp_v	
		Constant differential pressure Δp_v	
		Constant differential pressure Δp_v	
		Constant speed	



WILO - Faults, Causes and Remedies

LED Indicator	Meaning	Diagnostic	Cause	Remedy
lights green	Pump in operation	Pump runs according its setting	Normal operation	
blinks red/green	Pump in function but stopped	Pump restarts by itself after the fault is disappeared	1. Undervoltage $U < 160 \text{ V}$ or Overvoltage $U > 253 \text{ V}$ 2. Modul overheating: temperatur inside motor too high	1. Check voltage supply $195 \text{ V} < U < 253 \text{ V}$ 2. Check water and ambient temperature
blinks red	Pump out of function	Pump stopped (blocked)	Pump does not restart by itself due to a permanent failure	Change pump
blinks orange	Pump out of function	Pump stopped	Pump is not starting	Change pump
LED off	No power supply	No voltage on electronics	1. Pump is not connected to power supply 2. LED is damaged 3. Electronics are damaged	1. Check cable connection 2. Check if pump is running 3. Change pump

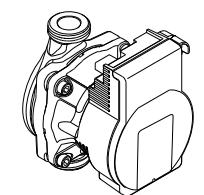

[http://www.esbe.eu/global/en/
products/circulation-units](http://www.esbe.eu/global/en/products/circulation-units)





Factory setting



= Factory settings












Grundfos Display

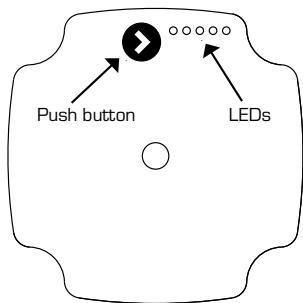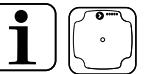

[http://www.esbe.eu/global/en/
products/circulation-units](http://www.esbe.eu/global/en/products/circulation-units)




Grundfos - Faults, Display and Solutions

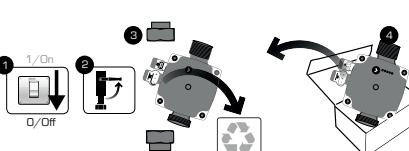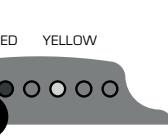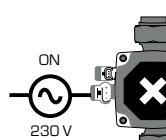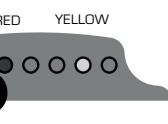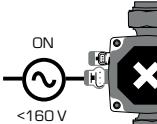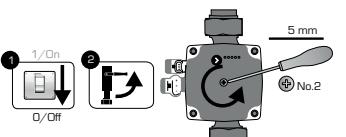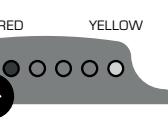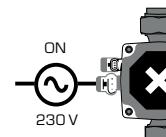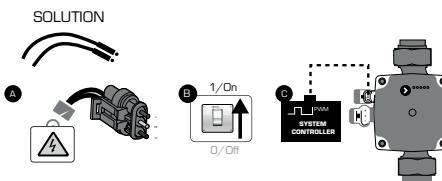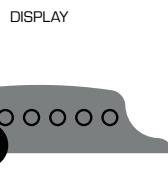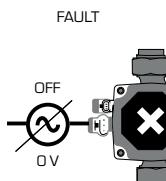

7

Settings navigation

7

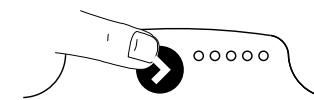

Mode UPM3 xx-50 UPM3 xx-70

1 1

2 2

3 3

AUTO_{ADAPT} AUTO_{ADAPT}

Mode UPM3 xx-50 UPM3 xx-70

1 1

2 2

3 3

AUTO_{ADAPT} AUTO_{ADAPT}

Mode UPM3 xx-50 UPM3 xx-70

1 1

2 2

3 3

MAX MAX

8

Expose application info using leaflet

8

